

Hex Adjustable Hinge



1. Use the tool provided to adjust the tension of the hinge.



2. Turn Counter-clockwise to increase tension (See arrow above numbers); Clockwise to decrease tension



3. There are 9 numbers for tension adjustment (1 to 9). 1 is the lowest tension while 9 is the highest.



4. Do not tighten beyond 9. Most gates use 5 to 7 for tension requirements. Set desired tension at stop riser. (See arrow on images 3 and 4)
